



Retractor bracket should be parallel with the **fixing bracket** to ensure that the belt releases vertically. If the retractor is knocked or fouls on the vehicle bulkhead, this can cause the belt to “stick” and not operate smoothly. If the bracket is not feeding the belt at 90 degrees to the floor, this can usually be rectified by bending the retractor back into position.